 


INSTRUCTIONS FOR SETUP

To contact NEMO Customer Service
Email: journey@nemoequipment.com
Phone: 800-997-9301


1 Stake Corners (optional)



Position your tent as desired and stake the four corner anchors. As you pull at the corners, watch the tension in the floor of the tent to keep it even. If the ground is too hard for stakes, tie anchors to rocks or other heavy objects.



 
2 Attach Jake's Feet



Press the ball ends of the poles into the fittings (Jake's Feet) at the corners of the tent.



3 Clips and Ball Caps

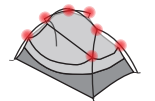


Attach the inner tent to the main poles with clear clips. Snap ends of cross pole in ball caps on sides of tent.



4 Attach Fly




Cover the inner tent with the rain fly and clip the corners of your fly to the last bar on the Jake's Feet. Adjust tension in the fly using the webbing straps and ladder lock buckles.

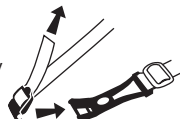

5 Vestibules and Tension



Stake both vestibules and pull firmly on all adjustable corner anchors. Add guy-lines for additional strength. A properly tensioned tent ensures maximum water shedding and wind resistance.

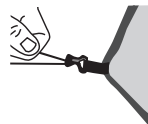

©2018 NEMO Equipment, Inc.



Remember to leave no trace. Before leaving your campsite, take a thorough look around making sure you have not left anything behind, out of place, or damaged.

DAGGER™ SERIES