

ROCK 62



MANUAL & INSTALLATION GUIDE

INDEX

INDEX	p. 2
WOOX HERITAGE	р. З
PRODUCT OVERVIEW	p. 4
KEY FEATURES	p. 5
SPECIFICATIONS	p. 5
ROCK 62 COMPONENTS LIST	р. 6
CLEANING AND CARE	p. 7
WARRANTY	p. 8
CONTACT	p. 10

When it comes to outdoor products and explorer accessories, some are made in a factory by scientists, and others are born on the workshop of an artisan with sawdust under his fingernails. We are the creation when that artisan builds a lab. Drawing from over 100 years of Italian tradition and cutting-edge global technology, we are driven by a passionate group of enthusiasts who have made it their mission to bring the outdoor industry forward. This is the heritage of WOOX!

We are dedicated to providing advanced products and personal assistance that will transform your adventures – heirlooms to pass down to generations and stories to tell your grandchildren.

This is what we do.

Your Fellow Outdoorsman

Kendall Reep Kendall Reep

The WOOX Rock62 knife is a perfectly balanced, full tang, fixed-blade knife.

Constructed using only the highest quality parts, materials and techniques, the spine of the knife features jimping for an enhanced grip with your thumb, as well as a place to strike fire starters. The blade is made of Sleipner steel (HRC rating of 60-62) that comes cradled in handles made of either walnut or micarta and attached with custom-fitted screws.

The Rock62 measures 9 ³/₄' or 25cm overall and features a drop point blade that is 4 ¹/₄" or 11cm long. WOOX has developed a leather sheath specifically designed only for Rocks62. It's perfect for the trail or for your everyday needs around the house.

KEY FEATURES

- BLADE: Constructed of high-alloyed Uddeholm Sleipner steel.
- GRIP: Full tang and perfectly balanced.
- CUSTOMIZATION: Interchangeable handles as adaptive as the climate.
- DURABILITY: Custom fit steel screws.

SPECIFICATIONS

To view the detailed product specifications visit https://wooxstore.com/products/rock-62-walnut-knife

ROCK 62 COMPONENTS LIST

- A. Point
- B. Blade
- C. Full Tang Spine
- D. High quality screws
- E. Handles
- F. Pommel





CLEANING AND CARE

- 1. Dampen a cleaning cloth with WOOX cleaning kit degreaser. Wipe down the knife removing any dust, dirt or debris from the blade and handle.
- 2. Inspect for any damage or wear and tear. If anything is damaged see WOOX FAQ on WOOX website or contact WOOX customer service.
- 3. Remove both screws holding the handles to the knife. Dampen a rag with WOOX cleaning kit degreaser. Clean the handles and the body of the knife removing any dust, dirt or debris.
- 4. Reattach handles in reverse of disassembly.
- 5. Wipe the knife down with a clean dry rag.



WARRANTY

We hope you are happy with your WOOX products. However, if you have experienced problems with your WOOX product, we encourage you to seek information in our FAQ section. You are also welcome to contact our Customer Support if you need assistance to troubleshoot any problems you are experiencing.

IMPORTANT: BY USING YOUR WOOX PRODUCTS BRANDED ITEMS, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF OUR TWO-YEAR LIMITED WARRANTY ("WARRANTY") AS SET OUT BELOW.

Limited Hardware Warranty

Subject to the limitations set forth below, WOOX, LLC. ("WOOX") warrants that its products will be free from defects in materials and workmanship, under normal use and service for two years from the date of purchase from WOOX or its authorized resellers.

You may return any new hardware product purchased from WOOX that arrives in damaged condition, for a full refund within 30 days of purchase. WOOX reserves the right to test these damaged returns and impose a customer fee equal to 15 percent of the product sales price if the customer misrepresents the condition of the product. Any returned product that is damaged through customer Any replaced or repaired product or part has a ninety (90) day warranty or the remainder of the initial warranty period, whichever is longer. This warranty does not apply to equipment that has been damaged or rendered defective,

- \cdot as a result of accident, misuse or abuse;
- \cdot by the use of parts not manufactured or sold by WOOX;
- \cdot by modification without prior written consent from WOOX;
- · damage resulting from transit, neglect, power surge or failure, or operating environment;
- \cdot any event not due to normal wear and tear; or for -
- discontinued items;

WARRANTY

· periodic inspections for maintenance;

• failure of the product arising from incorrect installation or use not consistent with the instructions and technical or safety standards prescribed in the product user manual; or

 \cdot failure of any item as a result of not following the proper care instructions provided in the product user manual.

This limited warranty only applies to the original purchaser of the WOOX product with original proof of purchase.

Warranty and return service may be obtained by contacting WOOX Support within the applicable warranty period for a Return Material Authorization (RMA) number. Once an RMA number is issued, the defective product must be shipped back to WOOX prepaid, insured and wrapped in the original or similar shipping package to ensure that it will not be damaged during shipment. When returning defective product to WOX for service, the RMA number must be marked on the outside of the shipping package. Any product received at WOOX not packaged properly may be refused as out of warranty. Physically damaged products due to improper packaging will not be processed for warranty.

Any product returned without an RMA number may be rejected and sent back to the Customer at WOOX' discretion. WOOX disclaims any obligation to pay for the shipping of any such returned product, it being understood that the Customer shall bear the cost of returning such products.

This limited warranty gives you specific legal rights and does not, in any way, affect the rights given to you by law.

WOOXSTORE.COM

fO@WOOXOUTDOOR

WOOX LLC 1245 26th Street SE, Hickory, NC 28602 - USA Registered[®] and Trademarked[™] in 2019. All rights reserved.