



**IMPORTANT! READ CAREFULLY
AND KEEP THESE INSTRUCTIONS
FOR FUTURE REFERENCE.**

POCO SERIES



POCO PLUS



POCO

Congratulations on your purchase of an Osprey Poco Child Carrier. To find your specific Poco model look for the printed name on the back of your child carrier and follow the information contained in this owner's manual to safely use and operate your Poco Child Carrier.



WARNING FALL OR STRANGULATION HAZARD.

READ ALL INSTRUCTIONS BEFORE USING YOUR OSPREY POCO SERIES FRAME CHILD CARRIER.



MAXIMUM LOAD 22 KG / 48.5 LBS. (Child, gear and pack weight combined)



WARNING Do not use carrier if child cannot sit upright unassisted.



WARNING Do not use carrier with a child weighing less than 7.25kg / 16 lbs. or more than 18 kg / 40 lbs. Do not use carrier with child less than six months old.



WARNING Do not leave the child unattended in this carrier!



WARNING

When the child is in the carrier, their head may be higher than the adult's head. Care should be taken to be aware of hazards; e.g., door frames, low branches of trees, etc.



WARNING

Always use child retention system to prevent child from falling or sliding out of carrier which may cause serious injury.



WARNING

Do not place on counter tops, tables or other elevated surfaces.





⚠ WARNING When using the carrier the adult shall be aware of the following:

- + The Poco Series is designed for only one child to be carried by an adult.
- + Check the child carrier to assure all buckles, snaps, straps and adjustments are secure before each use.
- + Always inspect the child carrier prior to use for damage. Never use the child carrier with a bent frame. Never use with broken buckles anywhere on the pack. Never use with tearing, torn or ripped seams or fabric anywhere on the pack.
- + The carrier is suitable for leisure activities, but not for sport activities; e.g., skiing, cycling, etc.
- + Care should be taken when putting on or removing the child carrier.
- + The adult's balance may be adversely affected due to movement of the child and also the adult.
- + The adult will need to take great care when bending/leaning sideways or forward.
- + Be aware that the child in the child carrier may suffer from the effects of weather and temperature before you do. Dress the child appropriately and occasionally check the temperature of their ears and face.
- + For sun protection deploy the sunshade and for additional protection apply sunscreen to child.
- + The child in the child carrier can become tired. Take frequent breaks when using your Poco child carrier.
- + Be careful to protect the child's feet when the child carrier is on or near the floor in order to avoid injury.
- + Do not let the child stand on the child seat within the carrier.

Make sure to register your Poco Series child carrier by mailing in the included registration card or visiting osprey.com/pocoregistration.

The following are instructions and diagrams for:

ASSEMBLY

- Step 1 Poco child carrier set-up
 - Step 2 Fit the adult
 - Step 3 Fit and secure the child
 - Step 4 Safely put on the Poco child carrier
- Sunshade instructions
Droolpad Instructions

OVERVIEW

- Suspension
- Unique Features
- Shared Features

POCO ACCESSORIES

PACK CARE INSTRUCTIONS

QUESTIONS

FEATURES



1 SUNSHADE

The built-in sunshade easily stores and deploys from dedicated zippered pocket for convenient UV protection.

2 DROOL PAD

The drool pad at the front of the cockpit is soft to the touch and comfortably padded for the child.

3 TOY LOOPS AND SIDE MESH POCKETS

Small cord loops and open mesh pockets located in and around the child cockpit provide child access to toy and pacifier storage.

4 DELUXE CHILD COCKPIT

Fully framed and padded cockpit surrounds the adjustable Double Halo harness and child seat for safety. Soft contact surfaces, anatomical fit and ventilated side panels provide comfort.

5 ADJUSTABLE STIRRUPS

For children at the top of the stated weight range requirements in this owner's manual the deluxe padded and adjustable stirrups offer leg support to prevent circulation deprivation.

6 LIGHTWEIGHT FOLDING ALUMINUM FRAME

A lightweight aluminum frame fully supports loads and provides a stable platform to set the child carrier down. The locking hinges and rotating sidearms allow the frame to fold down for travel and storage. The Poco Child Carrier case provides extra protection and storage when traveling or not in use (sold separately).

7 ZIPPER STASH POCKET

Zippered slash pocket for small items with a secure key clip.

8 DUAL GRAB HANDLES

Safely pick up or set down child carrier with dual reinforced grab handles.

9 EXTERNAL HYDRATION SLEEVE

An opening at the top of the backpanel allows for convenient hydration reservoir storage and access for both child and adult. We recommend a 1.5L Osprey reservoir for optimal fit and function.

10 OSPREY AIRSPEED SUSPENSION

A continuous panel of lightweight mesh extends from the top of the backpanel to the lumbar. The seamless structure contours automatically to the body to provide outstanding fit, excellent ventilation and unrestricted movement when wearing the pack.

11 ADJUSTABLE TORSO

With 5"/13cm of torso adjustment, the Poco Series is quickly and easily fitted to a variety of adult users even while on the trail.

12 LOWER ZIPPERED COMPARTMENT

The lower zippered compartment offers storage for diapers and other items. The Poco Plus offer an extra-large lower compartment for additional storage.

<i>Poco Plus</i>	17L
<i>Poco</i>	14L

13 HIPBELT POCKETS

Hipbelt pockets offer quick and easy access to trail snacks or small items without taking off the child carrier.

<i>Poco Plus</i>	<i>Zippered hipbelt pockets</i>
<i>Poco</i>	<i>Open mesh hipbelt pockets</i>

14 FIT-ON-THE-FLY HIPBELT*

The adjustable Fit-on-the-Fly hipbelt offers 5"/13cm of extension on each side for a comfortable, ventilated custom fit and superior load support.

*Poco Plus only

15 LOWER SIDE STRETCH MESH POCKETS*


*Poco Plus only

16 LARGE FRONT PANEL COMPARTMENT*


*Poco Plus only

SUNSHADE


The built-in sunshade, included on all Poco Child Carrier models, is easy to deploy from its dedicated zippered pocket and offers convenient UV protection for the child.

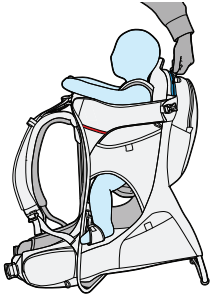


- 1 Unzip the sunshade pocket marked with woven label.

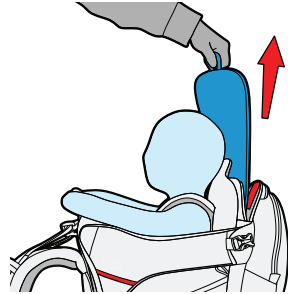

- 2 Grab the cord loop on the top of the sunshade and pull the sunshade out of the pocket.

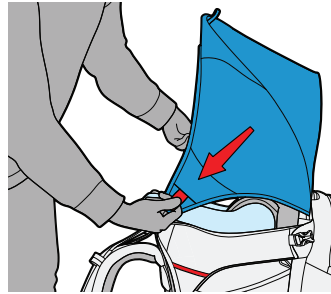


- 3 Securely grab the two red tabs and pull them forward.

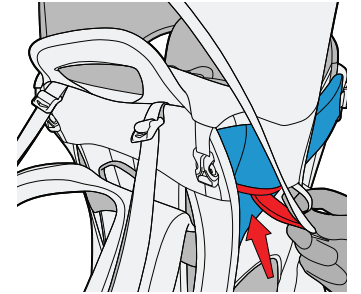


- 4 Insert the red tabs into the sleeves at the front of the sidearms to secure the sunshade. Your sunshade is now installed.

TO STORE YOUR SUNSHADE, FOLLOW THESE STEPS:

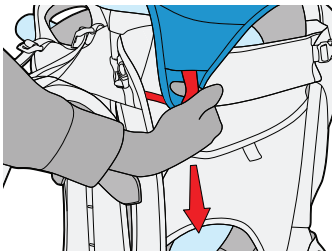

- 5 Firmly grasp the red webbing loops with your fingers and remove the red tabs from their sleeves taking care to ensure the sunshade does not spring back at the child.

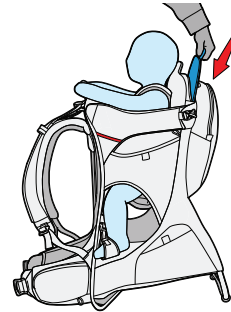


- 6 Slide the sunshade down into the storage pocket and zip the storage pocket shut.


DROOL PAD

The drool pad is removable for cleaning when necessary. Use only warm water and mild detergent. Air dry in a well-ventilated area out of direct sunlight.

To remove and clean, follow these steps:

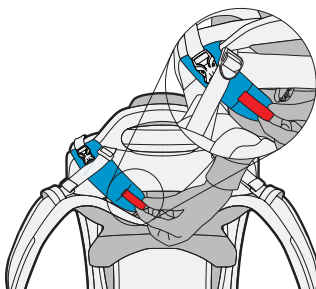


- 1 Reach into the adult backpanel upper cavity, slide your finger through the red webbing loop and pull down to release drool pad hook and loop tabs.

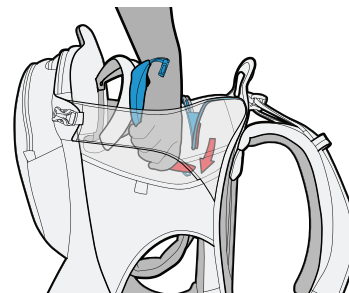


- 2 Push down firmly on the drool pad to release the hook and loop attachment at the lower corners.

Reverse steps 1-2 to reinstall.


1. POCO CHILD CARRIER SET-UP

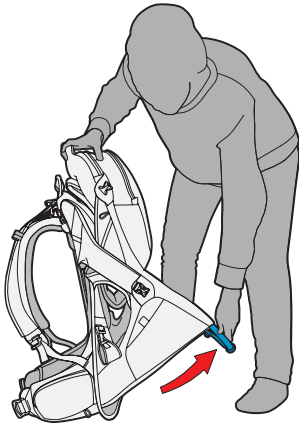


1.1 Deploy the articulating footbar by pulling the footbar back until an audible click is heard.

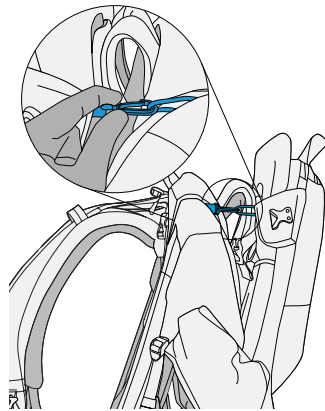

1.2 If your Poco arrived in the stored position with the child cockpit secured flat and sidearms folded inward, unclip the closure hooks on each side and spread the child cockpit open.

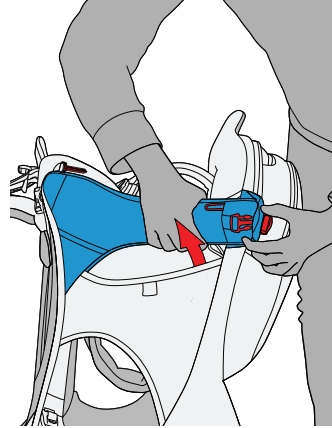

1.3 Rotate the sidearms out of the child cockpit and insert into the cuff with the red male buckle located on both sides of the child's head rest. Ensure the sidearm is fully nested inside the cuff.

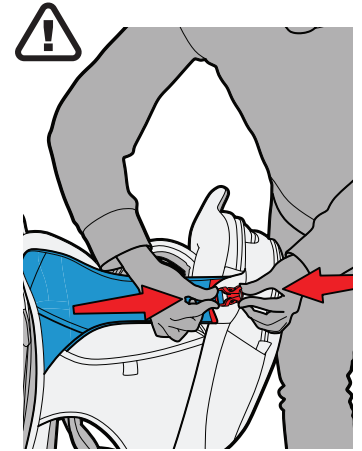

1.4 Once the sidearms are resting in the cuffs, connect the red male buckle of the sidearms to the red female buckle of the cuffs. Your Child Carrier cockpit is now locked into the child carrying position.


To store and travel with your Poco, lower the child seat all the way, reverse Steps 1.1-1.4 and store in the Poco Carry Case (sold separately).

2. FIT THE ADULT


⚠ WARNING Child must not be in the carrier during the adult fit process.

HIPBELT SIZING 26"-48" / 66cm-122cm
TORSO SIZING 15"-21" / 38cm-53cm


FIT THE HIPBELT

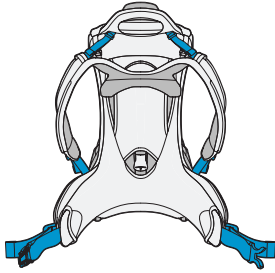

2.1 Loosen the harness, hipbelt and load lifter straps.

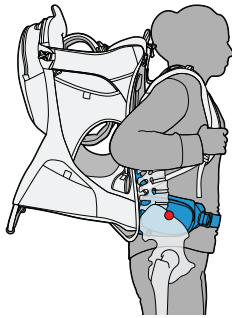


2.2 Put the pack on and place the hipbelt centered over the hipbones. Buckle and tighten the hipbelt.

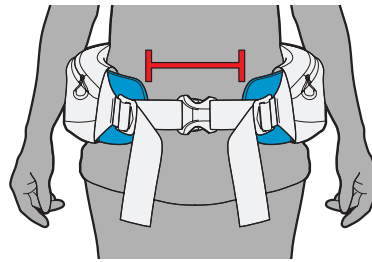


2.3 After tightening there should be 3-6 inches/8-15 centimeters between both hipbelt wings. The Fit-on-the-Fly feature on the Poco Plus model provides additional hipbelt adjustment for a custom fit.

TO ADJUST THE FIT-ON-THE-FLY HIPBELT, FOLLOW THESE STEPS:

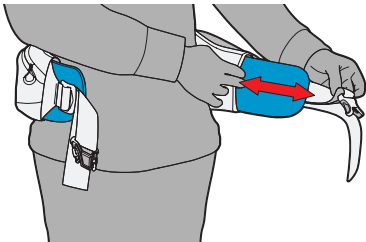


2.4 Poco Plus Only - Separate hook and loop fabric closure between interior hipbelt mesh and extension wing. Slide the extension wings in or out to achieve proper fit and ensure both wings extend the same length for proper load distribution using size arrows as a guide. Press firmly to reengage the hook and loop.

FIT THE BACKPANEL AND HARNESS

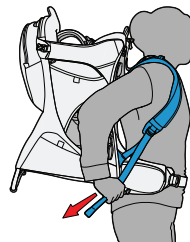


2.5 After fitting the hipbelt, tighten the shoulder harness by pulling the straps down and back.

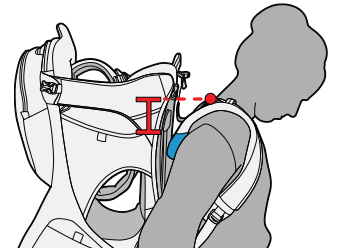


2.6 When properly fitted the shoulder harness yoke should rest 1-2 inches/2.5-5 centimeters below your C7 vertebra [the bump at the base of your neck].


TO ADJUST THE TORSO LENGTH, FOLLOW THESE STEPS:

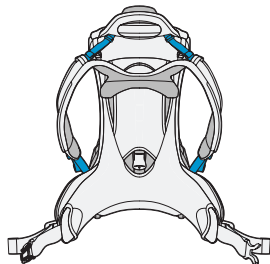

2.7 Take the pack off and completely loosen the pack's load lifters and harness straps.

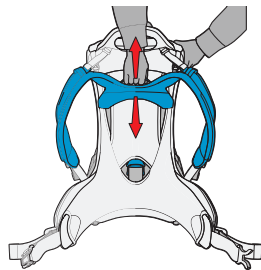


2.8 Lift up on the torso adjustment cam in the center of the backpanel and slide the shoulder harness up or down to the correct torso length.

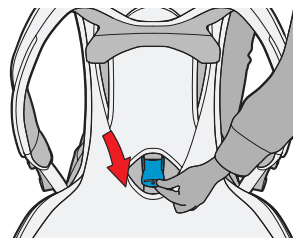


2.9 Push the adjustment cam down to lock the backpanel into position. Your child carrier is now fitted to the adult.

3. FIT AND SECURE THE CHILD

PREPARE THE CHILD COCKPIT

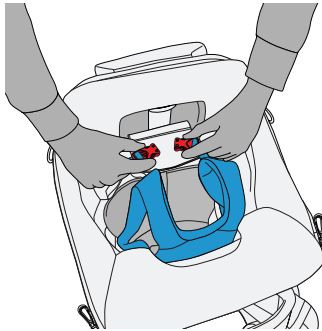


3.1 Open the DoubleHalo child harness by releasing both red harness buckles located below the child's headrest.

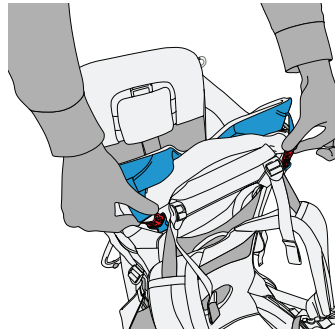

3.2 Connect the red male child harness buckles to the female buckles on the top corners of the adult's backpanel. This keeps the harness out of the way to make it easier to place the child in the carrier.


ADJUST CHILD SEAT HEIGHT

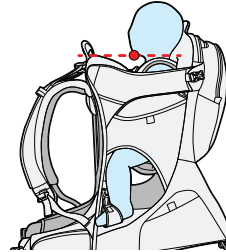


3.3 For proper fit, the child's chin should be level to the top of the drool pad at the front of the cockpit. Place the child in the carrier to check if adjustment is needed.

To adjust the seat, follow these steps:

⚠ WARNING Child must not be in the carrier while adjusting seat height.

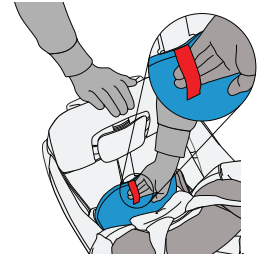


3.4 To move the seat up, grab the red handle at the back of the seat and pull up and the seat will automatically lock into position.

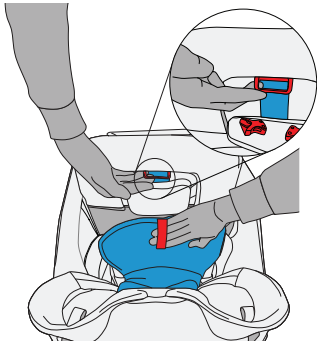


3.5 To move the seat down pull up the large cam buckle located at the base of the child's headrest while pushing down on the seat to reach the desired position.


SECURE THE CHILD

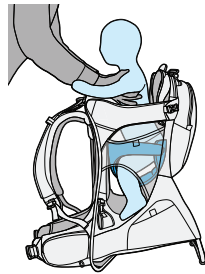


3.6 Place child into carrier guiding each leg through the corresponding left and right Double Halo leg loops. Ensure proper fit by confirming the child's chin is level with the top of the drool pad.

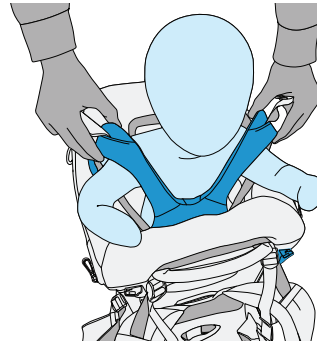

3.7 Unbuckle the red male buckles on the child harness from the grey female buckles on the top corners of the adult backpanel. Guide the child's arms through the Double Halo harness arm loops.

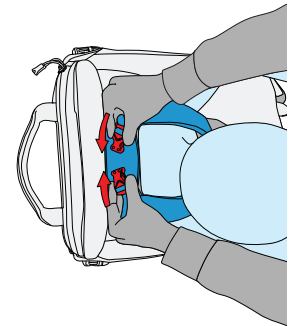


3.8 Buckle the right and left red harness male buckles into the red female buckles located below the child's headrest and behind the child's shoulders.

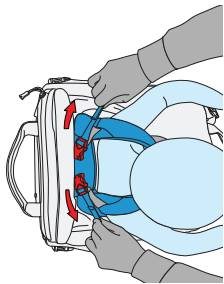


3.9 Cinch down both right and left straps so that the harness is snug around the child's upper torso. The child is now secure in the cockpit.

ADDITIONAL CHILD FITTING TIPS

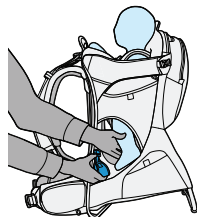


3.10 Use the stirrups for children at the top of the stated weight range requirements in this owner's manual. Place feet in stirrups and adjust the stirrup height so the child's knees are slightly bent to prevent circulation deprivation.

4. SAFELY PUT ON THE CHILD CARRIER

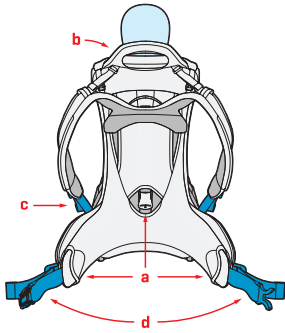


4.1 Before putting on the pack with child:


- a Ensure the adult torso and hipbelt are properly fitted on the adult. (Refer to Step 2)
- b Ensure the child is properly fitted and secure within the child carrier. (Refer to Step 3)
- c Loosen one side of the harness — keeping the side you intend to put on your shoulder first tight and fitted.
- d Unbuckle and loosen the adult hipbelt and adult sternum strap.

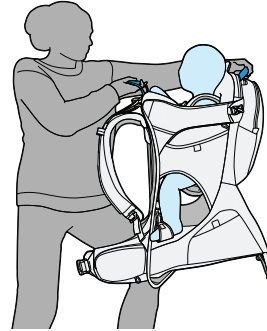

4.2 While standing, face the adult backpanel and use both handles at the front and rear of the child cockpit to lift the child carrier and place the frame onto your slightly bent knee.

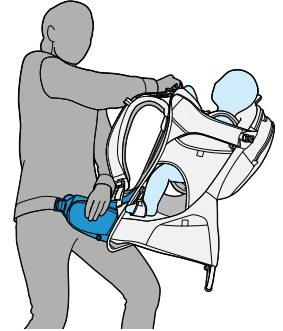


4.3 Let go of the handle behind the child's headrest, and spread the hipbelt wings apart with your free hand.

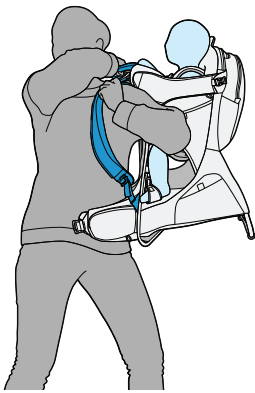


4.4 Slip your free arm through the tightened and fitted harness strap, grab the handle in front of the cockpit with your other hand and lift the carrier up onto your shoulder.




4.5 While still holding the shoulder strap, lean forward to stabilize the child and child carrier on your back. Let go of the handle in front of the cockpit, slip your free arm through the shoulder harness and slide the child carrier onto both shoulders.

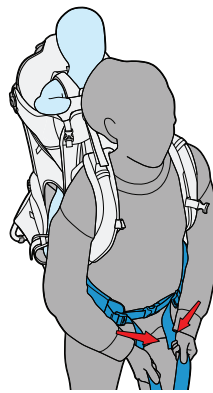


4.6 Buckle and tighten the hipbelt.

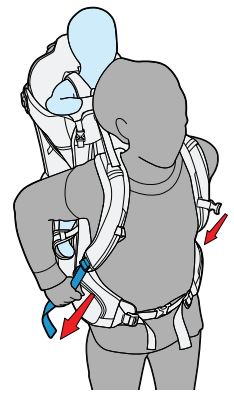

4.7 Tighten the shoulder harness straps.

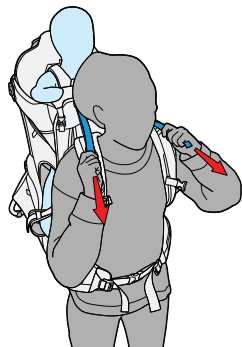

4.8 Tighten the load lifter straps.

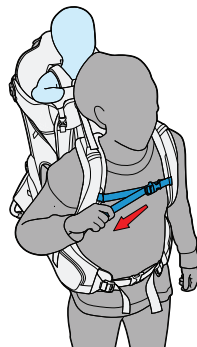

4.9 Buckle and tighten the sternum strap. You are now ready to use your Poco child carrier.

Additional Recommendation

After safely putting on the child carrier, reach back and collapse the footbar for greater maneuverability. Before removing the child carrier it is critical to re-deploy the footbar, ensuring you hear an audible click

To safely remove the child carrier, ensure the footbar is deployed and you hear the audible click, then reverse steps 4.1–4.9.

OVERVIEW **SPECS**



POCO PLUS

SPECS	ONE SIZE
Cubic Inches	1587
Liters	26
Pounds	7.89 lbs
Kilograms	3.58 kg
Inches	29h x 16w x 19d
Inches Folded	30h x 16w x 11d
Centimeters	73h x 40w x 48d
Centimeters Folded	76h x 40w x 29d


MAX LOAD 48.5 lbs | 22 kg
[Child, gear and pack weight combined]



POCO

SPECS	ONE SIZE
Cubic Inches	1220
Liters	20
Pounds	7.69 lbs
Kilograms	3.49 kg
Inches	28h x 16w x 18d
Inches Folded	29h x 16w x 11d
Centimeters	71h x 40w x 45d
Centimeters Folded	74h x 40w x 29d

MAX LOAD 48.5 lbs | 22 kg
[Child, gear and pack weight combined]

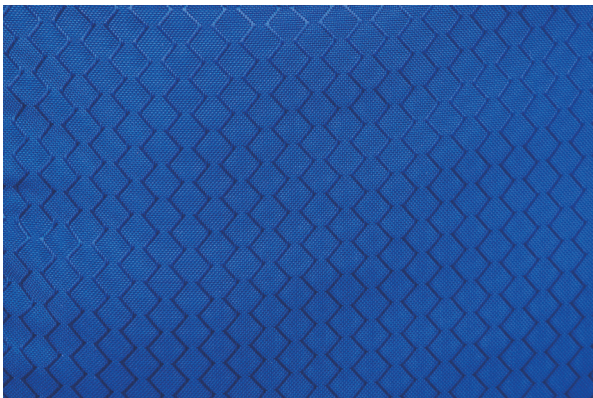

BLUESIGN® APPROVED MAIN FABRIC 210D NYLON DOBBY

- + Highest level of consumer safety
- + Produced with a minimum impact on people and the environment
- + Made from approved chemical products and raw materials

Textiles and accessories carrying the Bluesign® approved label meet the strict safety and environmental requirements of the Bluesign® criteria. These articles are made from Bluesign® approved chemical products and raw materials and are produced in a resource conserving way with a minimum impact on people and the environment.

For more information visit www.bluesign.com

POCO ACCESSORIES



POCO RAINCOVER

- + Stows into a built-in pouch
- + 4-point easy installation
- + Clear viewing windows
- + Reflective logo

HOW TO FIT RAINCOVER ON POCO CHILD CARRIER

- 1 Fit the raincover over the deployed Poco sunshade.
- 2 Thread the two raincover toggles through the cord loops on the hipbelt.
- 3 Wrap the two hook and loop straps around the kickstand.
- 4 Buckle the raincover and around the grab handle.

PACK CARE

Osprey recommends Nikwax® products for pack care. For complete instructions on cleaning your pack, visit osprey.com.

STANDARD MAINTENANCE

- + After each trip, be sure to clean out your pack thoroughly.
- + Clean zippers often to prevent them from failing. Use mild soap, warm water and a soft brush.
- + If your pack is wet, hang it to dry before storing.
- + When your Poco is not in use loosen all the straps.
- + Wash your pack if dirt, sweat, salt and stains have worked their way into fabrics, webbing or mesh.

WASHING YOUR PACK

- + Brush out and remove gear, food, dirt or spilled items.
- + Do not wash in washing machine. Clean your pack and components in a bathtub or large sink using a mild detergent and warm water.
- + Agitate the pack gently and scrub all compartments and pockets inside and out with a soft brush.
- + Brush clean all zippers and rinse the interior channels and the exterior of all buckles.
- + Drain the soapy and dirty water from the bathtub or sink and refill with cool clean water. Rinse the pack thoroughly.
- + Hang to dry outdoors or in a well ventilated area out of direct sunlight.

QUESTIONS

Contact Osprey Customer Service. Real help from real people. Scroll over the customer service tab at osprey.com.

OSPREY CHILD SAFETY PRODUCTS, LLC

800 N Park St
Cortez, CO 81321 USA
1-866-284-7830
osprey.com

7 YEAR ALL MIGHTY GUARANTEE: POCO CHILD CARRIER AND ACCESSORIES

Osprey Child Safety Products LLC will repair any damage or defect for any reason free of charge during the first seven years from the date of manufacture. If we are unable to perform a functional repair on your Poco Child Carrier or Poco Accessory, we will happily replace it.

Additional or replacement parts should only be obtained from manufacturer, importer or organization responsible for its sales.

VISIT [OSPREY.COM](https://osprey.com) FOR WARRANTY AND REGISTRATION DETAILS.

Call 1-866-284-7830 or visit osprey.com for replacement parts or repair inquiries.